



Mitel

B

C

D

E

A

F

G

1

2 ABC

3 DEF

4 GHI

5 JKL

6 MNO

7 PQRS

8 TUV

9 WXYZ

*

0

#

Mute

Speaker

Speaker

Earpiece

H

I

J

Key	Description
A	Message Waiting Lamp
B	<p>Navigation keys and select button—Multi-directional navigation keys that allow you to navigate through the phone's UI.</p> <p>The right, left, and center navigation keys are used as softkeys.</p>
C	<p>Settings key—Provides services and static settings that allow you to customize your phone.</p>
D	<p>Goodbye key—Ends an active call. The Goodbye key also exits an open list (such as Call History) and menus (such as the Static Settings menu) without saving changes.</p>
E	<p>Redial key—Redials the last manually dialed number displayed on the LCD screen.</p>
F	<p>Hold key—Places an active call on hold. To retrieve a held call, press the applicable Line key.</p> <p>For more information, see Placing a Call on Hold or Off Hold on page 11.</p>
G	<p>Prime Line key —Line or Call Appearance Keys - Connects you to a line or call. The Mitel 6905 IP phone supports one line key with an LED indicator light.</p>
H	<p>Mute key—Mutes the microphone so that the caller cannot hear you. The LED beside the key turns on when the microphone is on mute.</p>
I	<p>Volume controls —Adjusts the volume for the ringer, handset, and speakerphone.</p> <p>Pressing these keys during an active call adjusts the volume of the audio device being used (handset or speaker).</p>
J	<p>Speaker—Transfers the active call to the speaker.</p>